

## Pulsation damper series

PD/40, PD/65 and PD/100

### Manual



© 2007 Bredel Hose Pumps B.V.

All rights reserved.

The information provided herein may not be reproduced and/or published in any form, by print, photo print, microfilm or any other means whatsoever (electronically or mechanically) without the prior written authorization of Bredel Hose Pumps B.V.

The information provided can be changed without prior notification. Bredel Hose Pumps B.V. or one of its representatives cannot be held liable for possible damage resulting from use of this manual. This is an extensive limitation of the liability which applies to all damage, inclusive of (without limitation) compensating, direct, indirect or consequential damage, loss of data, income of profit, loss or damage to possessions and claims of third parties.

Bredel Hose Pumps B.V. provides the information in this manual “as is” and does not take any responsibility and does not give any guarantee on this manual or its content. Bredel Hose Pumps B.V. rejects all responsibilities and guarantees. Furthermore, Bredel Hose Pumps B.V. does not take responsibility for and does not guarantee that information in this manual is accurate, complete or up to date.

Names, trade names, brands, etc. used by Bredel Hose Pumps B.V. may not, as per legislation concerning the protection of trade names, be considered as available.

# CONTENTS

<b>CONTENTS</b> .....	<b>3</b>
<b>1 GENERAL</b> .....	<b>4</b>
1.1 <i>How to use this manual</i> .....	4
1.2 <i>Service and support</i> .....	4
1.3 <i>Disposal of waste and the environment</i> .....	4
<b>2 SAFETY</b> .....	<b>5</b>
2.1 <i>Symbols</i> .....	5
2.2 <i>Intended use</i> .....	5
2.3 <i>Compliance Pressure Equipment Directive</i> .....	5
2.4 <i>Use In Potentially Explosive Environments (ATEX)</i> .....	5
2.5 <i>Responsibility</i> .....	6
2.6 <i>Qualification of the user</i> .....	6
2.7 <i>Regulations and instructions</i> .....	6
<b>3 WARRANTY CONDITIONS</b> .....	<b>7</b>
<b>4 DESCRIPTION</b> .....	<b>8</b>
4.1 <i>Identification of the product</i> .....	8
4.2 <i>Operation of the pulsation damper</i> .....	9
4.3 <i>Pulsation damper hose</i> .....	9
4.4 <i>Pulsation damper selection</i> .....	10
<b>5 INSTALLATION AND COMMISSIONING</b> .....	<b>11</b>
5.1 <i>Unpacking</i> .....	11
5.2 <i>Inspection</i> .....	11
5.3 <i>Installation conditions</i> .....	11
5.3.1 <i>Ambient conditions</i> .....	11
5.3.2 <i>Set-up</i> .....	11
5.4 <i>Lifting and moving the pulsation damper</i> .....	12
5.5 <i>Pressurizing the pulsation damper</i> .....	12
<b>MAINTENANCE</b> .....	<b>14</b>
5.6 <i>Cleaning the pulsation damper hose internally</i> .....	14
5.7 <i>Removing the pulsation damper hose</i> .....	14
5.8 <i>Mounting the pulsation damper hose</i> .....	15
<b>6 TROUBLESHOOTING</b> .....	<b>17</b>
<b>7 SPECIFICATIONS</b> .....	<b>18</b>
7.1 <i>General information</i> .....	18
7.2 <i>Torque values</i> .....	18
7.3 <i>Weights</i> .....	18
7.4 <i>Dimensions</i> .....	19
7.5 <i>Spares list</i> .....	19
1.2 <i>Surface treatment</i> .....	21
<b>8 EC DECLARATION OF CONFORMITY</b> .....	<b>22</b>
<b>9 SAFETY FORM</b> .....	<b>23</b>

---

# 1 GENERAL

## 1.1 How to use this manual

This manual is intended as a reference book by means of which qualified users are able to install, commission, operate and maintain the pulsation damper mentioned on the front cover.

## 1.2 Service and support

For information with respect to specific adjustments, installation, maintenance or repair that fall beyond the scope of this manual, contact your Bredel representative. They will be happy to help. Make sure you have the following information at hand:

- serial number pulsation damper
- type number pulsation damper

You will find this data on the identification plate of the pulsation damper (see: "[Identification of the product](#)").

## 1.3 Disposal of waste and the environment







Enquire within your local government about the possibilities for reuse or environment friendly processing of packaging materials, (contaminated) lubricant and oil.

Always observe the local rules and regulations with respect to processing (non-reusable) parts of the pulsation damper.

## 2 SAFETY

### 2.1 Symbols

In this manual the following symbols are used:

	<p><b>WARNING</b> Procedures, which, if not carried out with the necessary care, may result in serious damage to the pulsation damper or in serious bodily harm.</p>
	<p><b>CAUTION</b> Procedures not carried out with the necessary care, may result in serious damage to the pulsation damper, the surrounding area or the environment.</p>
	<p>Remarks, suggestions and advice.</p>
	<p>Procedures, remarks, suggestions or advice which refer to use in potentially explosive atmospheres (ATEX) in accordance with European guideline 94/9/EC.</p>

### 2.2 Intended use

The pulsation damper is exclusively designed for the damping of pulses on the discharge side of a Bredel hose pump. After consultation with your Bredel representative, and only on certain conditions, the pulsation damper may be used as a pressure relief valve. Every other or further use is not in conformance with the intended use<sup>1</sup>. The manufacturer cannot be held responsible for any damage or harm resulting from this. The pulsation damper is designed in conformance with the current European standards and directives. Only use the pulsation damper in conformance with the intended use described above. If you want to change the application of your pulsation damper, contact your Bredel representative first.

<sup>1</sup> The “intended use” as laid down in EN 292-1 is “...the use for which the technical product is intended in accordance with the specifications of the manufacturer, inclusive of his indications in the sales brochure”. In case of doubt it is the use which appears to be its intended use judging from the construction, execution and function of the product. Observing the instructions in the user’s documentation also belongs to intended use.

### 2.3 Compliance Pressure Equipment Directive

The pulsation dampers as mentioned on the front cover are in full compliance with the European Pressure Equipment Directive 97/23/EC.

### 2.4 Use In Potentially Explosive Environments (ATEX)

The pulsation dampers PD/40, PD/65 and PD/100 do not fall under the European guideline 94/9/EC: Equipment for Use in Potentially Explosive Atmospheres (ATEX), if following instructions are respected:

- Pulsation Damper to be installed in Group II, category 2, temperature class T5 or lower qualified
- Pulsation Damper to be installed, operated and maintained according this manual, with respect to earthing (see: [Installation and Commissioning](#)), allowable pressures and temperatures (see: [Specifications](#)).

## 2.5 Responsibility

The manufacturer does not accept any responsibility for damage or harm caused by not strictly observing the safety regulations and instructions in this manual or by negligence during installation, use, maintenance and repair of the pulsation dampers mentioned on the front cover. Depending on the specific working conditions or accessories used, additional safety instructions can be required.

Immediately contact your Bredel representative, if you notice a potential danger while using your pulsation damper.



### **WARNING**

The user of the pulsation damper is always fully responsible for observing the local valid safety regulations and directives. Observe these safety regulations and directives when using the pulsation damper.

## 2.6 Qualification of the user

The installation, operation and maintenance of the pulsation damper should be carried out by well trained and qualified users. Temporary staff and persons in training may only use the pulsation damper under the supervision and responsibility of well trained and qualified users.

## 2.7 Regulations and instructions

- Everyone who works with the pulsation damper should be aware of the content of this manual and observe the instructions with great care.
- Never change the order of the actions to be carried out.
- Always store the manual near the pulsation damper.

---

### 3 WARRANTY CONDITIONS

The manufacturer offers a two year warranty on all parts of the pulsation damper. This means that all parts will be repaired or replaced free of charge with the exception of consumables such as hoses, seals or parts which have been misused or have been intentionally damaged.

If no original Bredel parts are used, every warranty claim becomes void.

Damaged parts which are covered by the applicable warranty conditions can be returned to the manufacturer. The parts must be accompanied by a fully completed and signed safety form, as present in the back of this manual. The safety form must be applied to the outside of the shipping carton. Parts which have been contaminated or which have been corroded by chemicals or other substances which can pose a health risk, must be cleaned before they are returned to the manufacturer. Furthermore, it should be indicated on the safety form which specific cleaning procedure has been followed, and it should be indicated that the equipment has been decontaminated. The safety form is required at all items, even if the parts have not been used.

Warranties purporting to be on behalf of Bredel Hose Pumps B.V. made by any person, including representatives of Bredel Hose Pumps B.V., its subsidiaries, or its distributors, which do not accord with the terms of this warranty shall not be binding upon Bredel Hose Pumps B.V. unless expressly approved in writing by a Director or Manager of Bredel Hose Pumps B.V.


## 4 DESCRIPTION

### 4.1 Identification of the product

The pulsation damper and pulsation damper hose can be identified by the contents of the name plate on the pulsation damper housing and the hose label.


The name plate of the pulsation damper contains the following information, relevant for identification:

- Type
- Serial number
- Identification number of Notified Body (PD65 and PD100 only)
- Year of manufacture

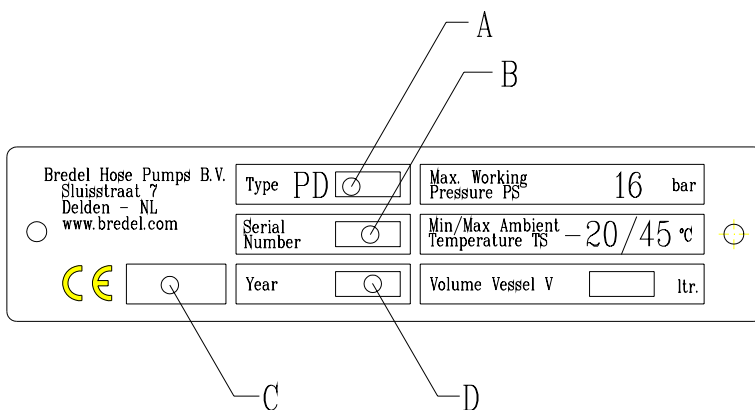

The hose label on the pulsation damper hose contains following information

- Re-order number
- Internal diameter
- Type of material of inner diameter

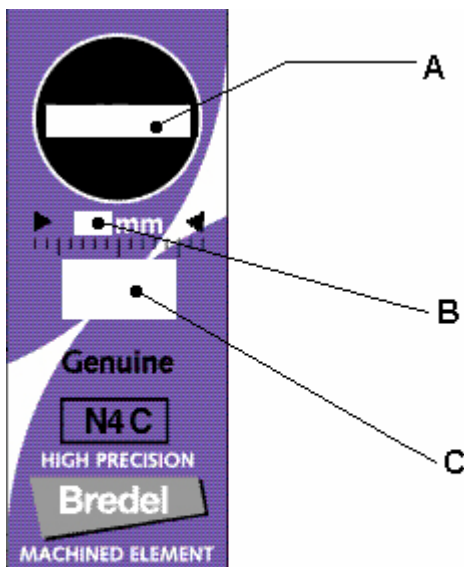

## 4.2 Operation of the pulsation damper

The Bredel pulsation damper reduces the pulses created in the discharge line by the hose pump. This is achieved by means of a thick-walled, reinforced rubber hose which is mounted in a carbon steel, cylindrical pressure vessel. The hose is surrounded by compressed gas (air or nitrogen).


Pulses are created when a pressing shoe leaves the pump hose, while rotating. Instantly the volume in the discharge line will increase with the volume of the pressing shoe. This will result in a pressure drop in the discharge line.

When the discharge pressure drops, the pulsation damper hose collapses and compensates for the released volume of the pressing shoe in the discharge line. Hereby the pulse will be reduced.

Dependant on the application the damper can reduce the pulse down to 10%. The damper is most effective above 500 kPa discharge pressure. The pulsation dampers can be applied up to a operating pressure of 1600 kPa. The pulsation dampers are safeguarded for over-pressure by a pressure-relief valve.

## 4.3 Pulsation damper hose

The pulsation damper hose liner material should be chemically resistant to the product to be pumped. Dependent on the specific requirements of your application, a matching hose should be selected.

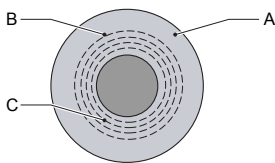

- A. Outer extruded layer made of natural rubber
- B. Four nylon reinforcement layers
- C. Inner extruded liner

2.3.1

For each pulsation damper, various hose types are available. The material of the inner liner of the hose determines the hose type. Each hose type is marked by a unique colour code.

Hose type	Material	Colour code	Article number:		
			PD/40	PD/65	PD/100
NR	Natural rubber	Purple	P040020	P065020	P100020
NBR	Perbunan	Yellow	P040040	P065040	P100040
EPDM	EPDM	Red	P040075	P065075	P100075


**i** Consult your Bredel representative for Hose Pumps for more detailed information about the chemical and temperature resistance of pulsation damper hoses.

**i** Store the pulsation damper hose in a cool, dry place and do not subject it to sunlight.

#### 4.4 Pulsation damper selection

The pulsation damper types mentioned on the front cover are functional with more than one type of Bredel hose pump type. In the following table the right pulsation damper can be selected to match your hose pump:

<b>Selection table pump and pulsation damper</b>	
<b>Pulsation damper type:</b>	<b>Bredel Pump type:</b>
PD/40	SP(X)25, SP(X)32, SP(X)40
PD/65	SP(X)50, SP(X)65
PD/100	SP(X)80, SP(X)100

	If you are in doubt about the correct installation of your pulsation damper, contact your Bredel Hose Pumps representative for assistance. They will advise about the installation layout, pipe diameters, etc, to ensure optimum performance of your Bredel pulsation damper.
---	--

## 5 INSTALLATION AND COMMISSIONING

### 5.1 Unpacking

When unpacking carefully follow the instructions as given on the packaging or on the pulsation damper.

### 5.2 Inspection

Check that your delivery is correct and check it for any transport damage (see also paragraph : [“Identification of the product”](#)).

### 5.3 Installation conditions

#### 5.3.1 Ambient conditions

Make sure the ambient temperature, during normal operation of the pulsation damper, does not fall to below -20°C, and does not exceed +45°C.

#### 5.3.2 Set-up


When installing the pulsation damper consider the following points:

- The pulsation damper will not be effective for variable pump speeds or variable discharge pressures.
- Limit the presence of sharp bends. Make sure that the radius of the bent discharge line is as large as possible. It is recommended to use Y-connections instead of T-connections.
- The pulsation damper will be most effective if it is directly mounted onto the hose pump. Minimise the distance between pump and pulsation damper.
- The pulsation damper may be installed in either the horizontal or vertical position.
- The pulsation damper must be suitably supported.



If installed in a potentially explosive atmospheres, properly earth the pulsation damper and respect the instructions as mentioned in paragraph: [“Use In Potentially Explosive Environments \(ATEX\)”](#)

- Avoid, at all times, a pressure higher than the maximum operating pressure.
- Avoid too heavy loads on the flanges. The maximum forces are given in the table below:

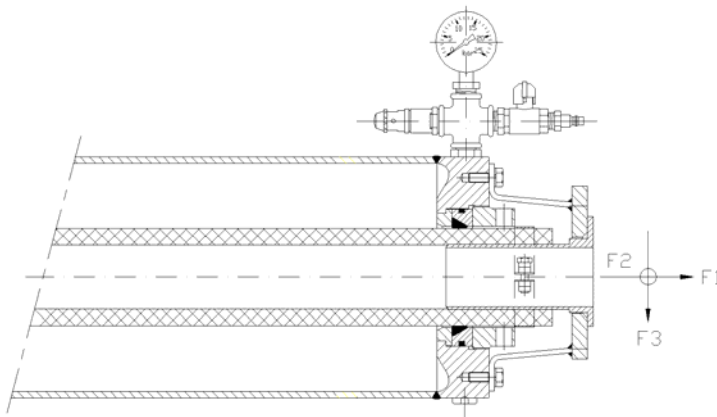

Maximum flange loads in [N]			
Force	PD/40	PD/65	PD/100
F1	1000	1400	2000
F2	500	700	1000
F3	200	300	400

#### 5.4 Lifting and moving the pulsation damper

To lift, move and position the pulsation damper, suitable hoisting belts must be used. The best place to attach the hoisting belts is immediately behind both flanges of the pulsation damper. Keep in mind the pulsation damper's weight. For weights see also paragraph "[Weights table](#)".



#### WARNING

If the pulsation damper is to be lifted, ensure that all safety regulations for lifting movements are adhered to and that the lifting is carried out by qualified personnel only.

#### 5.5 Pressurizing the pulsation damper



#### CAUTION

Do not pressurize the pulsation damper if it is **not** built into the pipe system. Consider the maximum operating pressure. Exceeding the maximum operating pressure may lead to serious injuries or damage to the pump and the environment.




#### CAUTION

Consider the filling medium for the pulsation damper housing – in this case **compressed air** or **nitrogen**. If in doubt concerning the correct filling medium for your pulsation damper, contact your Bredel Hose Pumps representative for assistance.



Pressurize the vessel to approximately 85% of the actual working pressure of the hose pump. Then fine-tune the pressure until optimal dampening is reached.

1. Shut the ball valve (pos. 17) on the pulsation damper.
2. Connect the filling medium to the filling nipple.
3. Apply pressure to the pulsation damper by the filling medium.
4. Open the ball valve (pos. 17) gently. Filling medium will now enter and pressurize the vessel. Check the pressure gauge (pos. 20) for the actual pressure inside the vessel.

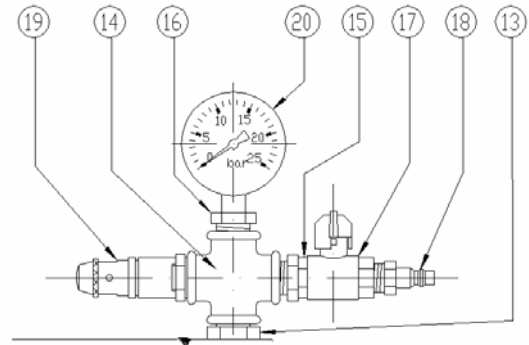

5. Pressurize the vessel to approximately 85% of the actual working pressure of the hose pump.
6. When the required pressure is reached, shut off the ball valve (pos. 17). If the vessel is pressurized over the maximum allowable working pressure, the pressure-relief valve will open automatically.
7. Leave the pulsation damper pressurized for at least 20 minutes. If the pressure has dropped, check the pulsation damper for any leakage or see paragraph ["Troubleshooting"](#) for solving the problem.



#### CAUTION

If you want to check the function of the pressure-relief valve, apply pressure to the vessel just over the maximum working pressure. The valve should automatically open. If not, do not apply more than 2300 kPa (23 bar) to the vessel, relieve the pressure and replace the pressure-relief valve.

8. Fine-tune the pulsation damper, by adjusting the pressure inside the vessel while the pump is running, to an optimal dampening.

## MAINTENANCE

During the development of the pulsation damper, Bredel Hose Pumps has once more applied its reputation in the area of simplicity, reliability, and maintenance-friendliness. However, careful maintenance and, in particular, scrupulous cleaning are essential conditions for problem-free operation of the pulsation damper.

- Before carrying out any maintenance to the pulsation damper, please thoroughly acquaint yourself with the directives in the paragraph "[Safety](#)".
- Any repair to the pulsation damper is to be carried out by properly skilled and authorised users only.
- After cleaning and maintenance work, do not use the pulsation damper until all parts that have been removed, are reinstalled correctly.



### WARNING

Release the pressure from the pulsation damper by means of the ball valve near the pressure-relief valve, before starting on any work to the pulsation damper.



### WARNING

Protect your hands and face from any dangerous substances when handling or examining the pulsation damper hose.



### CAUTION

After maintenance has been carried out, and before switching the pump back on, ensure that all valves present in the pipe work are opened.

### 5.6 Cleaning the pulsation damper hose internally

The inside of the pulsation damper hose is easily cleaned by flushing the pump and pulsation damper with clean water. If a cleaning fluid is added to the water, it must be checked that the hose liner material is resistant to that.



With many products to be pumped, it is necessary to clean the pulsation damper hose immediately once the pump is stopped, to avoid solidification and hardening of the product within the hose.

### 5.7 Removing the pulsation damper hose

1. Disconnect the electrical supply from the corresponding pump and close any valves to minimise product loss.
2. Position a tray under the pulsation damper. This tray must be sufficiently large to collect all liquid product inside the pulsation damper.
3. Release all pressure from the pulsation damper using the ball valve (pos. 17).

**WARNING**

If the pulsation damper hose is cracked or worn, liquid product to be pumped may escape via the ball valve (pos. 17). Therefore, take the necessary safety precautions.

4. Support the pulsation damper in such a way that it cannot fall during disassembly.
5. Remove the mounting bolts from both flanges. Lift the pulsation damper onto a suitable workbench. Adhere to the instructions for lifting and moving as mentioned in paragraph "[Lifting and moving the pulsation damper](#)".
6. Loosen the hose clamps (pos. 8) from both ends.
7. Unscrew the bolts (pos. 11 and 12) from both flanges (pos. 9).
8. Unscrew the locknut (pos. 7) on both sides until the compression on the pulsation damper hose has relieved.
9. Remove both inserts (pos. 10) from the pulsation damper hose.
10. Remove both metal rings (pos. 5 + 6), O-rings (pos. 4) and neck-rings (pos. 3)
11. Remove the mounting bolts from both flange supports (pos. 9) together with the inserts (pos. 10).
12. Remove the pulsation damper hose from the housing.

**5.8 Mounting the pulsation damper hose**

After the pulsation damper hose has been removed, as described in "Removing / replacing the pulsation damper hose", the (new) hose can be mounted in the pulsation damper.

**CAUTION**

If you are mounting a new pulsation damper hose, and you wish to continue pumping the same product, ensure that the colour code of the new hose matches the colour code of the old, used hose.

1. Check all parts to be mounted for any damage and replace when necessary.
2. Grease all metal parts which are not corrosion-protected and O-rings with Molykote<sup>®</sup> 55M or equivalent.
3. Place one of the collar bushes (pos. 3) in the damper housing. Install the pulsation damper hose (pos. 2). Place the second collar bush (pos. 3).
4. Slide both O-rings (pos. 4) at both ends over the pulsation damper hose.
5. Place both metal rings (pos. 5 + 6) and hand-tighten both pressing rings (pos. 7).
6. Loosely place the hose clamps (pos. 8) at both ends.
7. Loosely place the flanges on both sides (pos. 9) and place the inserts. (pos. 10)

8. Tighten the pressing rings (pos. 7) (see also paragraph "[Torque values](#)").
9. Tighten both flanges (pos. 9) using the corresponding bolts and spring washers. (pos. 11 and 12)
10. Lift the pulsation damper from the work bench and place it back into the pipe work. Observe the instructions for lifting and moving as mentioned in paragraph "[Lifting and moving the pulsation damper](#)". Mount and tighten the mounting bolts to the flanges at both ends.
11. Connect the electrical supply to the hose pump and open all necessary valves.
12. Pressurize the pulsation damper following the steps in paragraph "[Pressurizing the pulsation damper](#)".
13. Tighten both hose clamps (pos. 8) (see also paragraph "[Torque values](#)").

## 6 TROUBLESHOOTING

If the pulsation damper does not function (correctly), consult the following checklist to see if you can remedy the problem yourself. If you cannot, please contact your Bredel representative.

Problem	Possible cause	Solution
(Heavy) vibration of Pump, Pulsation damper or pipework	Pressure inside vessel too low	Pressurize the vessel of pulsation damper again according paragraph " <a href="#">Pressurizing the pulsation damper</a> ".
	Pressure inside vessel too high	
Product leakage	Not all parts have been greased properly.	Grease all necessary parts. See also paragraph " <a href="#">Mounting the pulsation damper hose</a> "
Pressure loss at pulsation damper housing	Damaged O-ring (pos. 4 or 5)	Replace the O-ring concerned.
	Pressing ring (pos. 7) incorrectly mounted	Tighten to the specified torque settings (see "Torque values")
Short pulsation damper hose life	Chemical corrosion of the hose	Check the compatibility of the hose material with the product to be pumped. Consult your Bredel representative for correct hose selection.
	High discharge pressures	Maximum operating pressure is 1600 kPa. Check whether the discharge line is blocked. Make sure the shut-off valves are fully opened and the pressure-relief valve (if present) in the discharge line is functioning properly.
	High product temperature	Consult your Bredel representative for correct pulsation damper hose selection.
	High pulsations	Restructure the discharge and inlet conditions.

## 7 SPECIFICATIONS

### 7.1 General information

Description	Value
Maximum allowable pressure in vessel	2300kPa
Maximum allowable working pressure discharge line before pulsation damper	1600 kPa
Allowable ambient temperature	-20°C to 45°C
Allowable Product temperature	-10°C to 80°C
Allowable Storage temperature	-40°C to 70°C
Maximum Surface Temperature	90°C (T5)
Air volume vessel	See: nameplate


### 7.2 Torque values

Description	PD/40	PD/65	PD/100
<b>Pressing ring (pos. 7)</b>			
Thread	M115 x 2	M145 x 2	M185 x 3
Torque value [Nm]	N/A	N/A	N/A
Toolbar diameter [mm]	Ø16	Ø16	Ø16
<b>Hose clamp (pos. 8)</b>			
Thread	M8	M8	M10
Torque value [Nm]	12	12	12
Key width [mm]	13	13	13
<b>Connecting flange (pos. 11)</b>			
Thread	M8	M10	M12
Torque value [Nm]	25	50	85
Key width [mm]	13	17	19

### 7.3 Weights

	PD/40	PD/65	PD/100
Pulsation damper, complete [kg]	32	75	135
Hose [kg]	2.2	4.9	11


### 7.4 Dimensions

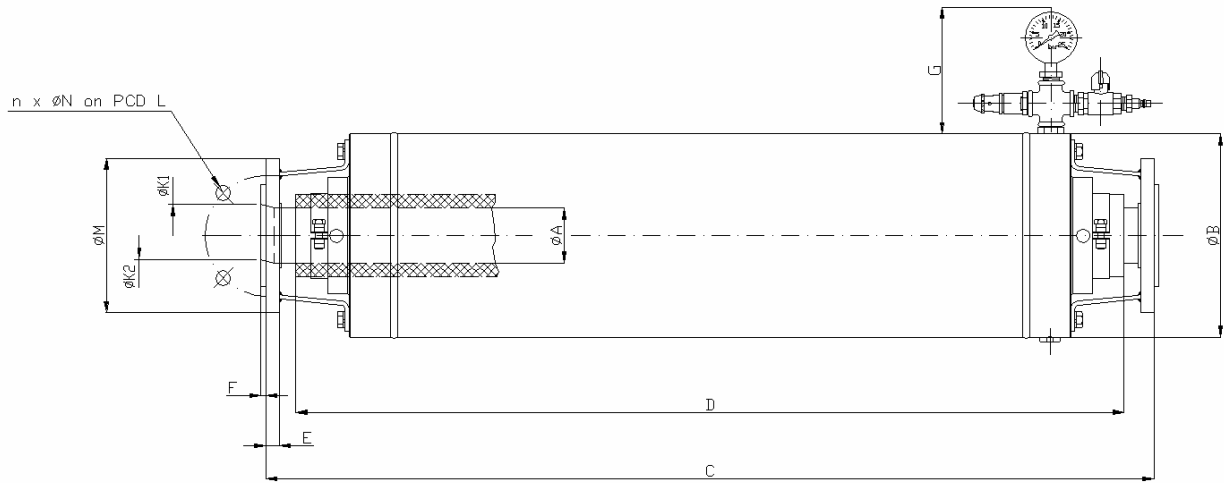

Damper Type	Pump Type	A	B	C	D	E	F			G	K1	K2	n	L	M	N
							Steel	SS	Non-ferro							
PD/40	SP(X)25	40	168	800	735	16	-	4	20	175	-	25	4	85	115	14
	SP(X)32						4	-			32	100		140	18	
	SP(X)40						2.5	40			-	110		150	18	
PD/65	SP(X)50	65	245	1050	975	16	-	6	20	175	-	50	4	125	165	18
	SP(X)65						6	3			65	-		145	185	18
	SP(X)80						8	8			-	80		160	200	18
PD/100	SP(X)80	100	324	1356	1295	18	8	8	48	175	-	80	8	160	200	18
	SP(X)100						3	100			-	180		220	18	

Dimensions in mm

### 7.5 Spares list

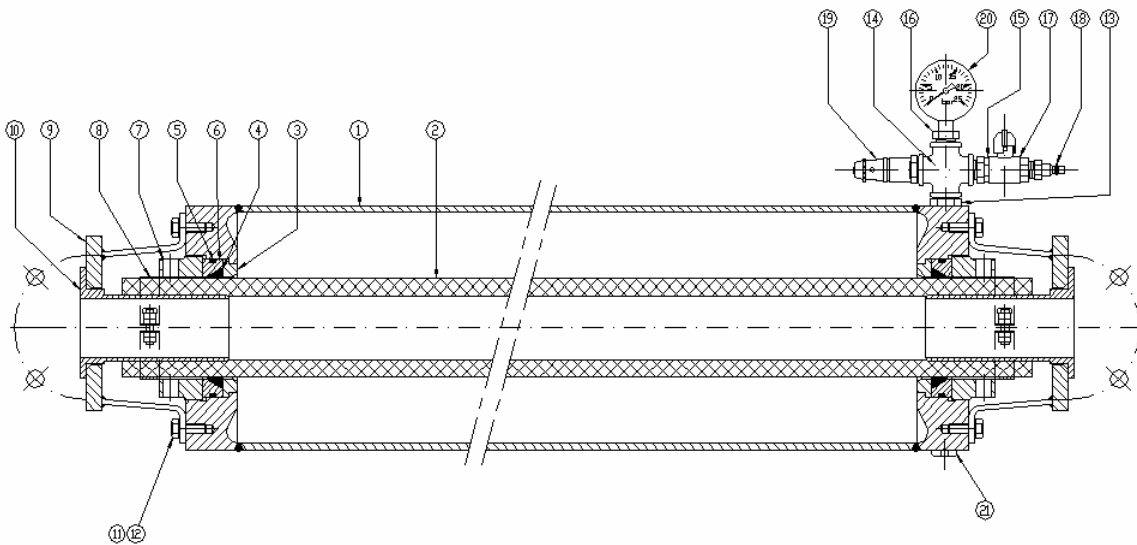

Pos.	Qty.	Description	PD/40	PD/65	PD/100
1	1	Housing	P040202	P065202	P100202
2	1	Hose NR	P040020	P065020	P100020
	1	Hose NBR	P040040	P065040	P100040
	1	Hose EPDM	P040075	P065075	P100075
	2	Collar bush	P040204	P065204	P100204
4	2	O-ring NBR	S110701	S111001	S111351
5	2	O-ring NBR	S123451	S123541	S123631
6	2	Metal ring	P040206NS	P065206NS	P100206NS
7	2	Pressing ring	P040207	P065207	P100207
8	2	Hose clamp	C122007	C122014	C122023
9	2	Flange, steel, DIN 40-25	P040213		
	2	Flange, steel, DIN 40-32	P040293		
	2	Flange, steel, DIN 40-40	P040209		
	2	Flange, steel, DIN 65-50		P065213	
	2	Flange, steel, DIN 65-65		P065209	
	2	Flange, steel, DIN 80-100			P100213
	2	Flange, steel, DIN100-100			P100209
	2	Flange, steel, ASA 40-25	P040271		
	2	Flange, steel, ASA 40-32	P040272		
	2	Flange, steel, ASA 40-40	P040273		
	2	Flange, steel, ASA 65-50		P065271	
	2	Flange, steel, ASA 65-65		P065273	
	2	Flange, steel, ASA 80-100			P100271
	2	Flange, steel, ASA100-100			P100273
	2	Flange, steel, JIS 40-25	P040277		
	2	Flange, steel, JIS 40-32	P040278		
	2	Flange, steel, JIS 40-40	P040279		
	2	Flange, steel, JIS 65-50		P065277	
	2	Flange, steel, JIS 65-65		P065279	
	2	Flange, steel, JIS 80-100			P100277
2	Flange, steel, JIS100-100			P100279	
10	2	Insert, SS PD40-25	P040215		
	2	Insert, PVC PD40-25	P040216		
	2	Insert, PP PD40-25	P040290		
	2	Insert, PVDF 40-25	P040280		
	2	Insert, SS PD 40-32	P040295		
	2	Insert, PVC PD 40-32	P040296		
	2	Insert, PP PD 40-32	P040291		
	2	Insert, PVDF 40-32	P040281		
	2	Insert, SS PD 40-40	P040211		
	2	Insert, PVC PD 40-40	P040212		
	2	Insert, PP PD40-40	P040292		
	2	Insert, PVDF PD40-40	P040282		
	2	Insert, SS PD 65-50		P065215	
	2	Insert, PVC PD 65-50		P065216	
	2	Insert, PP PD 65-50		P065290	
	2	Insert, PVDF 65-50		P065280	
	2	Insert, Steel PD 65-65		P065210	
	2	Insert, SS PD 65-65		P065211	
	2	Insert, PVC PD 65-65		P065212	
	2	Insert, PP PD 65-65		P065292	
2	Insert, PVDF 65-65		P065282		
2	Insert, Steel PD 100-80			P100214	

	2	Insert, SS PD 100-80			P100215
	2	Insert, PVC PD 100-80			P100216
	2	Insert, PP PD 100-80			P100290
	2	Insert, PVDF 100-80			P100280
	2	Insert, Steel PD 100-100			P100210
	2	Insert, SS PD 100-100			P100211
	2	Insert, PVC PD 100-100			P100212
	2	Insert, PP PD 100-100			P100292
	2	Insert, PVDF 100-100			P100282
11	8	Bolt M8 x 20	F111071		
	8	Bolt M10 x 25		F111096	
	8	Bolt M12 x 30			F111130
12	8	Washer M8, Spring Lock	F336011		
	8	Washer M10, Spring Lock		F336012	
	8	Washer M12, Spring Lock			F336013
13	1	Nipple	A132511	A121004	A121004
14	1	Cross piece G1/2"	A123003	A123003	A123003
15	1	Reducing ring G1/2"x 3/8"	A122006	A122006	A122006
16	1	Reducing ring G1/2"x 1/4"	A122005	A122005	A122005
17	1	Ball valve G3/8"	A106002	A106002	A106002
18	1	Nipple G3/8"	A125005	A125005	A125005
19	1	Safety valve G1/2"	A210003	A210003	A210003
20	1	Pressure gauge 0-25 bar	A220001	A220001	A220001
21	1	Stop	A124514	A124516	A124516

## 1.2 Surface treatment

- The pulsation damper are provided with a two-component epoxy-based coating. After drying the layer thickness will be at least 30 microns.
- Subsequently these components are provided with a two-component polyurethane top coating, in the RAL 3011 colour red and with a 100% gloss rate. After drying the layer thickness will be at least 30 microns.
- All galvanized parts, excluding fasteners, will have an electrolytic zinc layer of 15-20 microns.

## 8 EC DECLARATION OF CONFORMITY

Company: Bredel Hose Pumps B.V.  
 Address: Postbox 47  
 City: 7490 AA Delden  
 Country: The Netherlands

Declares as manufacturer for his own responsibility that the:

description: Pulsation damper for hose pumps  
 type/model: PD/40, PD/65 en PD/100

to which this declaration applies, is in conformance with the conditions of:

- the European machine directive 98/37/EC, annex II<sup>B</sup> EN60204-1 and
- the European pressure equipment directive 97/23/EC (PED). The products as mentioned above comply to fluid classification group I (dangerous fluids) and were subjected to the conformity assessment procedure as mentioned in the table below. EC-type examination (module B) has been in conformity with AD 2000 Edition 2002.

Type	Module(s)
PD/40	A1
PD/65	B + C1
PD/100	B + C1

The monitoring of the products is performed by Lloyds Register Netherlands B.V., located in Rotterdam, the Netherlands. Lloyd's Register Netherlands is a registered body notified under directive 97/23/EC Pressure Equipment under identification number: 0343.

When this pulsation damper is to be installed into a machine or is to be assembled with other machines for installations, it is not be put into service until the relevant machinery has been declared in conformity with these guidelines.



Responsible person: Hanjo Kruisinga, Managing Director,

Company: Bredel Hose Pumps B.V.  
 Address: Postbus 47  
 City: NL-7490 AA Delden  
 Country: Nederland  
 Tel.: +31 74 3770000  
 Fax: +31 74 3761175  
 Internet: [www.bredel.com](http://www.bredel.com)  
 E-mail: [hosepumps@bredel.com](mailto:hosepumps@bredel.com)

# 9 SAFETY FORM

## Product Use and Decontamination Declaration

In compliance with Health & Safety Regulations the user is required to declare the substances which have been in contact with the product(s) you are returning to Bredel Hose Pumps B.V. or any of its subsidiaries or distributors. Failure to do so will cause delays in servicing the item or in issuing a response. Therefore, please complete this form to ensure that we have the information before receipt of the item(s) being returned. A further copy must be attached to the outside of the packaging containing the item(s). The user is responsible for cleaning and decontaminating the item(s) before returning them. Please complete a separate Decontamination Certificate for each item returned. RGA No: .....

1. Company: .....  
 Address: .....  
 Zip Code: ..... Telephone: .....  
 Town: ..... Fax: .....  
 Country: .....

2. Product: .....

2.1 Serial Number:.....

2.2 Has the Product been used?  
 Yes (Go to section 3)  
 No (Go to section 4)

3. Details of the substances pumped

3.1 Chemicals names:  
 (a) .....  
 (b) .....  
 (c) .....  
 (d) .....

3.2 Precautions before handling these substances:  
 .....  
 .....  
 .....  
 .....

3.3 Actions to be taken in event of human contact:  
 i. ....  
 i. ....  
 i. ....  
 (d) .....

3.4 Cleaning fluid to be used if residue of chemical is found during service:  
 i. ....  
 ii. ....  
 iii. ....  
 v. ....

4. I hereby confirm that the only substance(s) that the equipment specified has pumped or come into contact with those named, that the information given is correct and the carrier has been informed if the consignment is of a hazardous nature

5. Signed: .....  
 Name: .....  
 Position: .....  
 Date: .....

Note: To assist us in our service, please describe any fault condition you have witnessed.  
 .....  
 .....



ISO 9001

Bredel Hose Pumps B.V.  
P.O. Box 47  
NL-7490 AA Delden  
The Netherlands  
Phone: +31 74 3770000  
Fax: +31 74 3761175  
E-mail: [hosepumps@bredel.com](mailto:hosepumps@bredel.com)  
Internet: [www.bredel.com](http://www.bredel.com)

TS03-060-C

29210391

Member of the Spirax-Sarco Engineering Group